

## MultiCode Keyless Entry Programming Instructions

Before you begin you must first determine your '**Radio Code**' (you will need it for *Step 1-C* in the programming phase.) To do this, remove the battery cover on your hand-held transmitter or look at the dip-switches on the receiver board located on the back of the garage door opener and write down the numbers corresponding to the dip-switches that are in the 'ON' position . (The 'ON' position being when the switches are pressed down towards the numbers) If switch 10 is 'ON', use 0 as the corresponding number. Example: 2,5,7,10 are 'ON' – your 'Radio Code' would be 2,5,7,0.

Read through the entire programming instructions before attempting to program your keyless entry, as you will only have **25 seconds** to complete each step. Failing to do so in the allotted time will cause your keyless entry to ((lock up)) for 5 minutes.

### **STEP 1: Radio Code Programming**

**A:** Press 'Radio Learn' twice

**B:** Press 1-2-3-4 (factory code)

**C:** Enter your 'Radio Code'

**D:** Press 'Radio Learn' to end programming

\*\*If the indicator LED blinks rapidly for 4 seconds, there was an error in programming. Remove the battery, press any button for 5 seconds then wait for 30 seconds before re-installing the battery and begin the programming sequence again.

### **STEP 2: Access Code Programming**

**A:** Choose any 4-digit PIN number (write it down for future reference.)

**B:** Press 'Access Learn' twice

**C:** Press 1-2-3-4 (factory setting)

**D:** Enter your new 4-digit PIN number

**E:** Press 'Access Learn' to end programming