

Locate the door control within sight of the door at a minimum height of 1.5 m where small children cannot reach, and away from all moving parts of the door and door hardware.

Installing the Door Control


1. Strip 11 mm of insulation from one end of the bell wire. Connect it to the two screw terminals on the back of the door control by color: white wire to 2 and white/red wire to 1.
2. Remove the cover from the door control by pushing the bottom of the cover up then outward. Fasten door control securely with 6ABx1-1/2" screws. If installing into drywall, drill 5/32" holes and use the anchors provided.
3. Run the bell wire up the wall and across the ceiling to the motor unit. Use insulated staples to secure the wire in several places. Do not to pierce the wire with a staple, creating a short or open circuit.
4. Strip 11 mm of insulation from end of bell wire. Connect the bell wire to the quick-connect terminals as follows: white to white and white/red to red (Figure 1).

NOTE: When connecting multiple door controls to the opener, twist same color wires together. Insert wires into quick-connect holes: white to white and red/white to red.




5. Use tacks or staples to permanently attach the entrapment warning label to the wall near the door control, and the manual release/safety reverse label in a prominent location on the inside of the garage door.

Programming The Remote Control

Below are instructions for programming your operator to operate with Security+® remote controls.

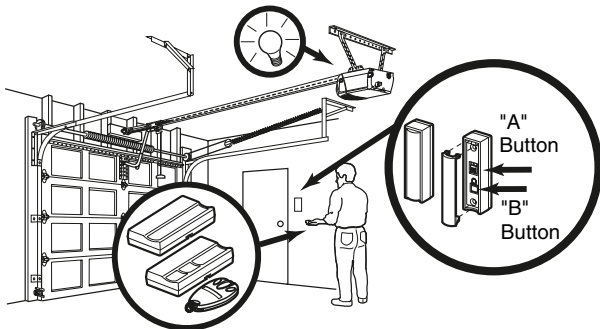

1. Remove the cover from the door control.
2. Press and hold the button on the hand-held remote that you wish to operate your garage door.
3. While holding the remote button, press and hold the "A" button on the Lighted Door Control.
4. Continue holding both buttons while you press the "B" button on the Lighted Door Control (all three buttons are held).
5. Release buttons when the motor unit lights blink. It has learned the code. If light bulbs are not installed, two clicks will be heard.

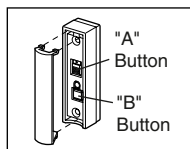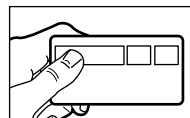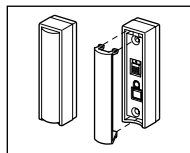

⚠️ WARNING


To prevent possible **SERIOUS INJURY** or **DEATH** from electrocution:

- Be sure power is not connected **BEFORE** installing door control.
- Connect **ONLY** to 24 VOLT low voltage wires.

To prevent possible **SERIOUS INJURY** or **DEATH** from a closing garage door:

- Install door control within sight of garage door, out of reach of children at a minimum height of 1.5 m, and away from all moving parts of door.
- **NEVER** permit children to operate or play with door control push buttons or remote control transmitters.
- Activate door **ONLY** when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- Always keep garage door in sight until completely closed. **NEVER** permit anyone to cross path of closing garage door.


Figure 1

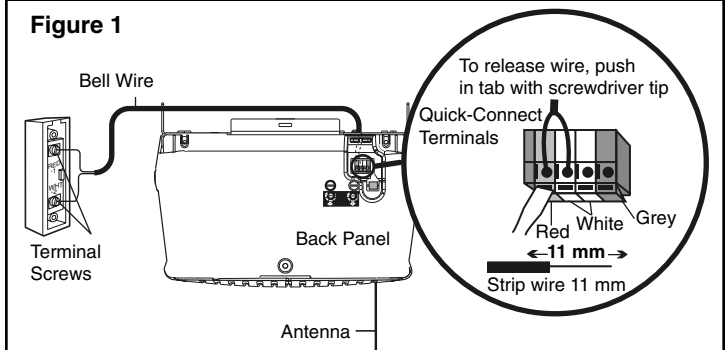

To Erase All Codes From Motor Unit Memory

To deactivate any unwanted remote, first erase all codes:

Press and hold the "learn" button on motor unit until the learn indicator light goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each remote or keyless entry you wish to use.

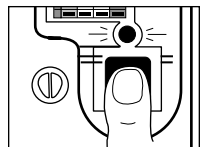

HOW TO ORDER REPAIR PARTS

DEK CANADA INC

1928 ST-REGIS BLVD.

DORVAL, QC

H9P 1H6

TEL: 514-685-5800

TOLL-FREE: 1-800-361-3198

FAX: 514-685-5804

www.dekcanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

PART NUMBER	DESCRIPTION	MODEL NUMBER
--------------------	--------------------	---------------------