


For use with garage door openers, gate operators or other products that are 390 MHz.


82LM/82LMC
 2-Button Remote Control

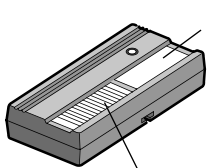

Compatible with Dip switch devices
 See Section A for programming

Compatible with Green Smart/Learn Button devices
 See Section B for programming

84LM/84LMC
 4-Button Remote Control

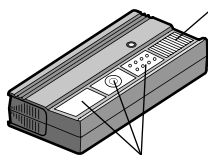

Compatible with Dip switch devices
 See Section A for programming

Compatible with Green Smart/Learn Button devices
 See Section B for programming

NOTE: Your product may look different than the products illustrated in this manual.

SECTION A - PROGRAMMING THE REMOTE CONTROL TO DIP SWITCH DEVICES

The Dip switches **MUST** be set to matching positions in all remote controls used to operate the same device. Follow the instructions described and shown below.

1 Remove the cover.

2 Place the old and new remote controls side by side. Set the Dip switches 1 through 9 to matching positions in all remote controls. Use a pen or screwdriver to move the switches to +, - or 0.

Match Dip switches (1-9)

3 Replace the cover.

4 Press the remote control button to activate the device.

SECTION B - PROGRAMMING THE REMOTE CONTROL TO SMART/LEARN BUTTON DEVICES

1 Locate the Smart/Learn button.

2 Press and immediately release the learn button. The learn LED will glow steadily for 30 seconds. Within 30 seconds...

3 Press and hold the button on the remote control that you wish to use.

Release the button when the garage door opener lights blink or two clicks are heard. If programming to other products, press the button a second time to activate the product.

TO ERASE ALL CODES FROM MEMORY

When deactivating any unwanted remote control code, all previous codes will be erased.

1 Press and hold the learn button on garage door opener or other product until the learn LED goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each remote control you wish to use.

THE REMOTE CONTROL BATTERY

The battery should produce power for at least one year. If the green LED is dim or does not come on, replace the battery.

1

1. Remove the cover.
2. Remove and dispose of the old batteries properly.
3. Replace the batteries with the same size and type of battery.
4. Replace the cover.

REPLACEMENT PARTS

12V Battery (2-Button Remote Control)	10A14
9V Battery (4-Button Remote Control)	10A16
Visor Clip	29B137
Visor Clip Holder (4-Button Remote Control)	31C412-1

NOTICE: To comply with FCC and or Industry Canada rules (IC), adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For service, dial our toll-free number:
 1-800-528-9131

HOW TO ORDER REPAIR PARTS

DEK CANADA INC

1928 ST-REGIS BLVD.

DORVAL, QC

H9P 1H6

TEL: 514-685-5800

TOLL-FREE: 1-800-361-3198

FAX: 514-685-5804

www.dekcanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

PART NUMBER	DESCRIPTION	MODEL NUMBER
--------------------	--------------------	---------------------