



# WIRELESS KEYPAD

WITH INTELLICODE® 2

This Wireless Keypad is compatible with all INTELLICODE® 1 and INTELLICODE® 2 radio equipped GENIE® products.

## OPERATING INSTRUCTIONS (KEEP FOR FUTURE REFERENCE)

### ATTENTION

If your garage door opener has a Serial Number sticker which looks like this, in which the first two numbers are 10 or higher, your opener is equipped with INTELLICODE® 2.



Follow the instructions on this page. Otherwise, follow the instructions on back.

### A WARNING

- A Moving Door can cause serious injury or death.**
- 1 Keep people clear of opening while Door is moving.
  - 2 Do Not allow children to play with Wireless Keypad.
  - 3 Wall Control should be mounted within sight of door, at least 5 feet above floor and clear of moving parts.
  - 4 During programming, the Door Opener could begin to run, so stay away from the moving Door and its parts. To keep the Door from moving, close the Door and disconnect it from the Opener by pulling the Emergency Release Cord.

# INTELLICODE® 2 MODE OF TRANSMISSION

This page is for Intellicode® 2 Only:

If you have an Intellicode® 1 opener or openers, go to the reverse side of this instruction.

## SECTION 1 BASIC PROGRAMMING FOR ONE DOOR INTELLICODE® OPENERS

### FOR CONVENIENCE


Program Keypad BEFORE mounting.

#### STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order **3 5 7**.
- Press **[PROGRAM]**.
- Enter your PIN (3 to 8 characters).
- Press **[PROGRAM]**.
- Close keypad cover and wait 30 seconds.

#### STEP 2: PROGRAMMING SINGLE DOOR OPENER

Press and hold **[PROGRAM]** until both LEDs turn BLUE.

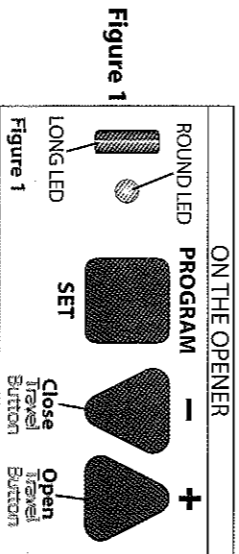

- Release button. Only round LED will be BLUE.
  - Press **[PROGRAM]**, release again. Long LED should blink PURPLE.
  - On the **Wireless Keypad**—enter your PIN.
  - Press **[PROGRAM]**. LEDs will stay on solid.
  - Press **[LEFT]** again. LEDs will turn off.
  - Press **[RIGHT]** again. Door opener should run.
  - Press any key to stop opener. (It will automatically stop at the fully open or fully closed position.)
- Wait until Keypad Backlight turns off (approximately 30 seconds).

#### STEP 3: OPERATING ONE DOOR OPENER

- To open or close the Garage Door.
- Enter your PIN.
- Press **[LEFT]**.

### NOTE

- If the Door does not move, check the LED on keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

For answers to questions, call 1-800-35-GENIE, or visit [www.geniecompany.com](http://www.geniecompany.com)

The Genie Company, 22790 Lake Park Blvd, Alliance, Ohio 44601  
Additional Genie® Products can be ordered through your local Genie® Professional Dealer. To locate a dealer near you, call 1-800-OK-GENIE.


©2010 GMI Holdings, Inc. D.B.A. The Genie Company

### FEATURES:

- Ability to Control up to three Genie® INTELLICODE® 1 or 2 Openers
- Simple to Program and Install
- PIN Codes can be up to 8 Characters
- Low Battery Power Indicator
- Stays Programmed During Battery Change
- Temporary PIN for Special Purpose Access
- Drill with 1/16" Drill Bit
- Phillips Screwdriver
- Pendil
- Mounting Screws INCLUDED

### TOOLS NEEDED:

- Drill with 1/16" Drill Bit
- Phillips Screwdriver
- Pendil
- Mounting Screws INCLUDED

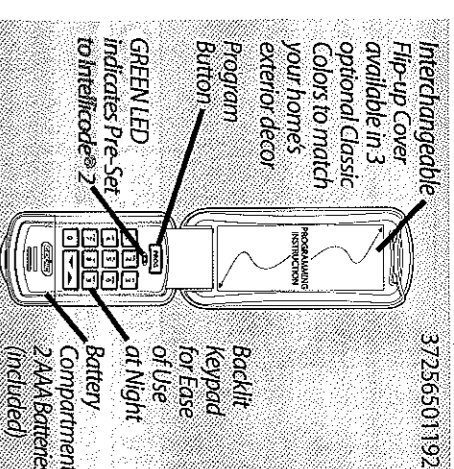

### If Safety Reverse does not work properly:

- 1 Close Door and disconnect the opener using Emergency Release Cord.
- 2 Do not use Door Opener, Remote, or Wireless Keypad.
- 3 Refer to Door and Door Opener Owner's Manuals before attempting any repairs.

## SECTION 2 PROGRAMMING FOR MULTIPLE DOOR INTELLICODE® OPENERS

### FOR CONVENIENCE

Program Keypad BEFORE mounting.

#### STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order **3 5 7**.
- Press **[PROGRAM]**.
- Enter your PIN (3 to 8 characters).
- Press **[PROGRAM]**.
- Close keypad cover and wait 30 seconds.

#### STEP 2: PROGRAMMING MULTIPLE DOOR OPENERS

- All Door Openers will use the same PIN.
- On your keypad:
- Enter your PIN and press **[PROGRAM]**.
  - Press **[PROGRAM]** again.
  - Press the number of Doors (total) you wish to control (**2** or **3**).
  - Press **[PROGRAM]**.

- On your opener's power head:
- Select first opener and press and hold **[SET]** until both LEDs turn BLUE.
- Release button. Only round LED will be BLUE.
- Press **[PROGRAM]** and release again. LEDs should blink PURPLE.

Decide which Door will be Door #1, #2 and #3.

On your Wireless Keypad:

- Enter PIN and press **[PROGRAM]**.
- Press the number that you have picked for this door (**1 2** or **3**).
- Press **[PROGRAM]** 3 times — opener will run.

Repeat procedure below dotted line for remaining openers.

Wait until Keypad Backlight turns off (approximately 30 seconds).

#### STEP 3: OPERATING MULTIPLE DOOR OPENERS

- Following programming—
- On your Wireless keypad:
- Enter your PIN.
  - Press **[LEFT]**.
  - Press the number of the door you wish to operate (**1 2** or **3**).
  - Press any key to operate the door.

### NOTE

- If the Door does not move, check the LED on keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

### FCC and IC CERTIFIED

This device complies with FCC Part 15 and RSS 210 of Industry Canada. The equipment does not intend and is not to be used in a manner that causes harmful interference to a residential installation. This equipment is designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications; however, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult your local dealer.

## SECTION 3 MOUNTING INSTRUCTIONS

The keypad must be mounted in sight of the Door(s), at least 5 feet above the ground and clear of any moving Door parts.

- A Mount Keypad. (Mounting screws located inside Battery Compartment).
- B Remove Battery Cover and batteries. (See Figure 3).

- Drill a 1/16" pilot hole for the top mounting screw.
- Install a screw into the drilled hole, leaving a 1/8" gap between the screw head and the wall. (See Figure 2)
- Hook the Keypad over the screw.
- Mark and drill pilot hole and fasten bottom screw.
- Install Batteries and Cover.

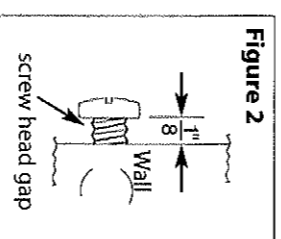

## SECTION 4 ADDITIONAL OPERATIONS

### CHANGING YOUR PIN

- Enter your current PIN and press **[PROGRAM]**.
- Enter your NEW PIN and press **[PROGRAM]**.

### USING A TEMPORARY PIN

A temporary PIN allows temporary access to your home by repair persons, meter readers, etc. if you so desire.

- Enter your current PIN and press **[PROGRAM]** 3 times.
- Enter your TEMPORARY PIN and press **[PROGRAM]**.

### NOTE

- DO NOT reprogram the Door Opener (s).
- Temporary PIN remains active only until the next time your normal PIN is entered.

### FORGOT YOUR PIN (RESETTING WIRELESS KEYPAD)


If you have forgotten your PIN or you fear it may have fallen into unauthorized hands, you must erase the old programming.

- Press and hold **[PROGRAM]**.
- While holding **[PROGRAM]**, press and hold **[LEFT]** for 5 seconds.
- Release both buttons. You must now start from the beginning and reprogram your Wireless Keypad.

### CHANGING BATTERY

- If the Keypad backlight does not come on, this indicates the need to replace the batteries.
- Press in on the front of the battery cover and slide it down off of the Keypad.
- Remove used batteries and replace with "AAA." Make sure the batteries are inserted properly using the polarity markings.
- No programming is lost during replacement of batteries.

- Covers available for:
  - Tan - P/N 37226T
  - Almond - P/N 37226U
  - Gray - P/N 37226S
  - White - P/N 37226R

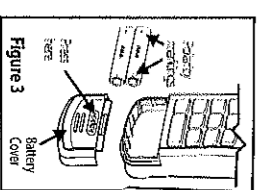

## A WARNING

If Safety Reverse does not work properly:



- 1 Close Door and disconnect the opener using Emergency Release Cord.
- 2 Do not use Door Opener, Remote or Wireless Keypad.
- 3 Refer to Door and Door Opener Owner's Manuals before attempting any repairs.

- A Moving Door can cause serious injury or death.**
- 1 Keep people clear of opening while Door is moving.
  - 2 Do Not allow children to play with Wireless Keypad.
  - 3 Wall Control should be mounted within sight of door, at least 5 feet above floor and clear of moving parts.
  - 4 During programming, the Door Opener could begin to run, so stay away from the moving Door and its parts. To keep the Door from moving, close the Door and disconnect it from the Opener by pulling the Emergency Release Cord.

## INTELLICODE® 1 MODE of CODE TRANSMISSION

### To Operate Intellicode® 1 Openers:






This Wireless Keypad comes from the factory as an Intellicode® 2 unit. In order to initially program an opener or openers which are Intellicode® 1, you must switch the keypad to Intellicode® 1 mode.

- After entering your PIN, Press .
  - Press and hold  for two seconds and the GREEN LED above the number keys will turn RED.
  - Close the Keypad cover.
  - Follow the instructions on this page for programming your Intellicode® 1 opener(s).
- Once all your doors have been programmed, there is no need to switch back and forth between Intellicode® modes. The keypad will automatically remember the mode of each opener.

## SECTION 1 BASIC PROGRAMMING FOR ONE DOOR INTELLICODE® OPENER FOR CONVENIENCE

Program Keypad BEFORE mounting.


### STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)




- Press in order   .
- Press .
- Enter your PIN (3 to 8 characters).
- Press .
- Close keypad cover and wait 30 seconds.

### STEP 2: TEACHING PIN TO SINGLE OPENER

Find the Learn Code Button and Learn Code Indicator LED on your door opener.

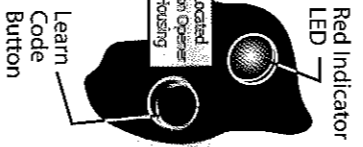- If your Door Opener has a black antenna wire and the serial number does not start with 10 or higher, the Learn Code Button and Indicator LED are located near the antenna. (The light lens may need to be opened. If you use an external receiver, it may need to be opened to access the Learn Code Button and Indicator LED.
- If your Door Opener does not have an Antenna, you have an External Receiver. The External Receiver cover must be removed to access the Learn Code Button and Indicator LED.



- Press the Learn Code Button.
- Learn Code Indicator LED (on Opener) will blink.
- Enter your PIN and press  on keypad.
- Learn Code Indicator LED stays on.
- Press  again.
- Learn Code Indicator LED turns off.
- Press  again.
- Opener will run.

Wait until Keypad Backlight turns off (approximately 30 seconds).

### STEP 3: OPERATING ONE DOOR OPENER

To open or close the Garage Door:

- Enter your PIN.
- Press .

## NOTE

- If the Door does not move, check the red LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

For answers to questions, call 1-800-35-GENIE, or visit [www.geniecompany.com](http://www.geniecompany.com)






The Genie Company, 22790 Lake Park Blvd., Alliance, Ohio 44601  
Additional Genie® products can be ordered through your local Genie® Professional Dealer. To locate a dealer near you, call 1-800-OK-GENIE.

©2010 GMI Holdings, Inc. D.B.A.The Genie Company

## SECTION 2 PROGRAMMING FOR 2 OR 3 DOOR INTELLICODE® OPENER FOR CONVENIENCE

Program Keypad BEFORE mounting.






### STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order   .
- Press .
- Enter your PIN (3 to 8 characters).
- Press .
- Close keypad cover and wait 30 seconds.






 
### STEP 2: PROGRAMMING MULTIPLE DOOR OPENERS

All Door Openers will use the same PIN.

On your keypad:

- Enter your PIN and press .
- Press  again.
- Press the number of Doors (total) you wish to control (  or  ).
- Press .

Decide which Door will be Door #1, #2 and #3.

- Enter your PIN and press  on Keypad.
- Press the number you have picked for this Door Opener (  or  or  ).
- Press and hold the  for 2 seconds.
- Press the Learn Code Button. (See Step 2 in Section 1.)
- Press  3 times.
- Opener will run.

Repeat procedure below dotted line for each opener. (Each Door Opener must be programmed to receive the signal from the Wireless Keypad.)

Wait until Keypad Backlight turns off (approximately 30 seconds).

### STEP 3: OPERATING MULTIPLE DOOR OPENERS

To open or close a Door after programming is complete:

- Enter your PIN.
- Press .
- Press Door Opener number (  or  or  ).

## NOTE

- If the Door does not move, check the red LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

## SECTION 3 MOUNTING INSTRUCTIONS


The Keypad must be mounted in sight of the Door(s), at least 5 feet above the ground and clear of any moving Door parts.

A Mount Keypad (Mounting screws located inside Battery Compartment)

- Remove Battery Cover. (See Figure 3).
- Drill a 1/16" pilot hole for the top mounting screw.



Figure 2

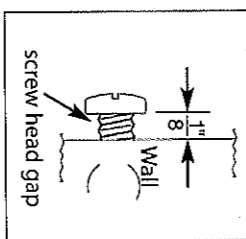- Install a screw into the drilled hole, leaving a 1/8" gap between the screw head and the wall. (See Figure 2.)
- Hook the Keypad over the screw.
- Mark and drill pilot hole and fasten bottom screw.
- Reinstall Battery Cover.





## SECTION 4 ADDITIONAL OPERATIONS

### CHANGING YOUR PIN

- Enter your current PIN and press .
- Enter your NEW PIN and press .

### USING A TEMPORARY PIN




- A temporary PIN allows temporary access to your home by repair persons, meter readers, etc. if you so desire.
- Enter your current PIN and press  3 times.
  - Enter your TEMPORARY PIN and press .

## NOTE

- DO NOT reprogram the Door Opener(s).
- Temporary PIN remains active only until the next time your normal PIN is entered.

### FORGOT YOUR PIN (RESETTING WIRELESS KEYPAD)

If you have forgotten your PIN or you fear it may have fallen into unauthorized hands, you must erase the old programming.

- Press and hold .
- While holding  press and hold  for 5 seconds.
- Release both buttons. You must now start from the beginning and reprogram your Wireless Keypad.

### CHANGING BATTERY

- If the Keypad backlight does not come on, this indicates the need to replace the batteries.
- Press in on the front of the battery cover and slide it down off of the Keypad.
- Remove used batteries and replace with "AAA." Make sure the batteries are inserted properly using the polarity markings.
- No programming is lost during replacement of batteries.

Covers available in:  
• Tan - P/N 37226T  
• Almond - P/N 37226U  
• Gray - P/N 37226S  
• White - P/N 37226R

