

GARAGE DOOR RADIO CONTROL

CODING INSTRUCTION

RADIO47

Remove the back cover from both the transmitter and the receiver for access to the code switches. Inside is a 8-bits dip switch exposed on the circuit board. Use a pencil or ball-point pen to set the 8-bits dip switch to the code of your choice.

For example, bits numbered 1, 3, 5, 7 are set to ON, bit numbered 2, 4, 6, 8 are OFF in the transmitter as below :

	1	2	3	4	5	6	7	8
ON	■		■		■		■	
↑		■		■		■		■

Then, to match the code of the transmitter, set the same bits numbered at ON/OFF position as the corresponding bits in the receiver as above example.

Be sure both are set to the same code, since a different setting of just one dip switch will prevent operation.

HOW TO ORDER REPAIR PARTS

DEK CANADA INC

1928 ST-REGIS BLVD.

DORVAL, QC

H9P 1H6

TEL: 514-685-5800

TOLL-FREE: 1-800-361-3198

FAX: 514-685-5804

www.dekcanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

PART NUMBER	DESCRIPTION	MODEL NUMBER
--------------------	--------------------	---------------------