

DAILY / WEEKLY ELECTRONIC TIMER

Before using your timer, please read the following instructions carefully. This quality product has been tested and certified to meet the CE and GS safety requirement.

IMPORTANT

This electronic timer has a maximum loading printed on the rating label, and under no circumstances should this be exceeded. Read the section on IMPORTANT SAFETY PRECAUTIONS.

FEATURES

- Up to 8 ON and OFF switches a day/56 ON and OFF switches per week.
- Option to programme individual days or 8 different weekday groups.
- Minimum switching period one minute.
- Summer timer/Winter time changeover.
- Easy to read LCD display.
- Random automatic ON/OFF security feature.
- Manual override button.
- Battery back-up.

SETTING THE TIME

Press and hold the CLOCK button. With this held pressed, the DAY button can be used to select the correct day, the HOURS button to select the correct hour and the MIN button to select the correct minutes. When the MIN button is released the time will be set with the seconds starting from 0. The days, hours and minutes can be advanced by either holding down or repeatedly pressing the appropriate button.

PROGRAMMING OF SWITCHING TIMES

The Auto Time Switch has the capacity for 8 ON/OFF switches. By using the blocks of days available, you can save programme capacity. The blocks days are:

Mon, Tues, Wed, Thurs, Fri, Sat, Sun

Individual days of the week

Mon, Tues, Wed, Thurs, Fri

Sat, Sun

Mon, Tues, Wed, Thurs, Fri, Sat

Mon, Wed, Fri

Tues Thurs, Sat

Mon, Tues, Wed

Thurs, Fri, Sat

For each ON time and each OFF time, the days, hours and minutes must be set.

Press the PROG button once to set the first ON time – you will see “on” and the number “1” appear on the left of the LCD display. This indicates that you can now enter the first ON time.

Press the DAY button to choose the required day or blocks of days, and then set the hour and minutes using the HOURS and MIN buttons.

When you have completed setting the required ON time, press the PROG button to validate the entry and move onto the first OFF time – you will see “OFF” and the number “1” appear on the left of the LCD display. This indicates that you can now enter the first OFF time by using the DAY, HOURS and MIN buttons as above. Press the PROG button to validate this entry.

Repeat for the remaining 7 ON/OFF settings as required.

When you have set the required ON/OFF settings, press the CLOCK button to return the display to the clock. The timer will now be ready to operate.

Note that you can check the settings you have programmed by pressing the PROG button repeatedly – each setting will appear on the screen.

MANUAL OVERRIDE

You can choose permanent Manual ON, permanent Manual OFF, Auto mode ON and Auto OFF by pressing the Manual button. When you choose Auto mode ON, the timer turns on until the OFF time programmed. The programme settings will only work in the Auto mode. When Auto mode OFF is chosen, the timer is OFF until the next programme activates.

RANDOM AUTOMATIC ON/OFF SECURITY FEATURE

With this option selected, it will switch the timer to ON and OFF, at least one cycle, in a random pattern for every 1 minute to 8 hours. This is ideal for use with a light, switching it ON and OFF automatically when you are out to make your home look occupied.

To enter the Random mode, press the DAY and HOURS buttons simultaneously and a “R” will appear on the LCD display. The Random Mode and programmes will work at the same time separately. When the Random Mode is activating, the timer will still switch ON and OFF within the set programmes. For example, the Random Mode might switch the timer to OFF even when the timer is switched ON by the set programmes.

Please note that if the timer has no set programme, the timer will switch ON or OFF about 1 minute after you enter the Random Mode. To exit Random mode, press DAY and HOURS buttons again.

SWITCHOVER: SUMMERTIME/WINTERTIME, TIME ZONE CHANGE

To change from winter time to summer time press the HOURS and MIN buttons simultaneously. The clock will be set forward one hour and an “S” will appear on the display. Repeat the same procedure in order to select winter time.

Note that if you purchase this unit during the summer, set the clock for British Summer Time. To do this, press the HOURS and MIN buttons simultaneously. The unit will then adjust to “summer” timer with the “S” appearing on the LCD display.

RESET BUTTON

To reset the unit, including the time and programmed ON/OFF settings, press the RESET button using a ballpoint pen.

IMPORTANT SAFETY PRECAUTIONS

- Do not use on an extension lead.
- Do not plug this timer into another timer switch
- Do not plug any device performing mechanical movement directly into the timer.
- Do not exceed the maximum loading (shown on the rating label on the product)
- Fan heaters and heaters with exposed elements should not be left unattended, and it is recommended that these types of appliances are not connected to timers.
- Do not insert needles or any other metal objects into the mains outlet.
- Avoid moisture, extreme temperatures, shock and vibration.
- Use indoors only. Recommended ambient temperature – 10 degrees C to 40 degrees C.
- Do not open the timer. Repairs must only be performed by a qualified electrician.
- To clean casing and display use a soft cloth. Do not use chemical or scouring agents. Do not submerge in water.

HOW TO ORDER REPAIR PARTS

DEK CANADA INC

1928 ST-REGIS BLVD.

DORVAL, QC

H9P 1H6

TEL: 514-685-5800

TOLL-FREE: 1-800-361-3198

FAX: 514-685-5804

www.dekcanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

PART NUMBER DESCRIPTION MODEL NUMBER